
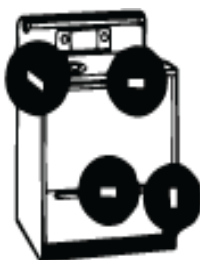


Model Number Finder

Locating Appliance Model Numbers

The following illustrates where to locate model numbers for the most common appliances.

Range / Oven

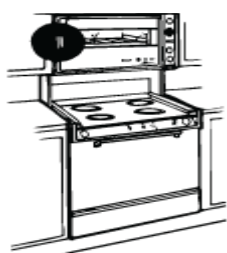


- Open oven door wide, model number plate located on mullion between the hinges.
- Lift the left front surface unit, model number plate is on the inner left side of frame.
- On the frame behind oven door.
- Pull lower drawer out. Model number plate is on horizontal or vertical member of frame.
- Lift right front or rear surface unit. Model number is on inside, right side of frame or the back corner of the frame.



- With oven door open, can be seen on cross member below oven.
- Can be seen at upper right hand corner when oven door is open.
- With oven door open wide open, model number plate can be seen on the cross member below oven.
- Open cabinet doors above hood. Model number plate is on connector box.
- On the inside back wall or ceiling of the hood.

Locating Appliance Model Numbers (continued)

Dishwasher

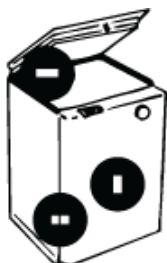

- On the back at the top of the storage cover for the hoses.
- On the back on the side of the storage cover for the hoses.
- On the back at the bottom of the skirt.
- Open the door to horizontal position. The Model number plate is on the left front lip of the tub.

Air Conditioner



- Remove grill for all locations (press down and lift out)
- Upper right hand corner of weather barrier or on the side panel in this area.
- At the end of the cooling unit.
- Below the control panel.
- Model number plate is to the right of the control panel or on the weather barrier behind the left side of the fan opening.

Washer



- On the left side at the lower front corner of the skirt.
- Under lid.
- On the toe board, Model number is upside down for easier reading.

Locating Appliance Model Numbers (continued)

Dryer




- With the door open, model number plate can be seen at the upper right corner of the door recess.

Refrigerator



- Remove grill panel. Model number plate is on cross member below right door.
- On the inner left wall of food compartment.
- On the left wall. Remove the vegetable drawer to see.
- On left wall of freezer compartment.

Freezer

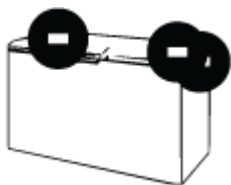

- On the inner lid panel.
- On the back.
- On the top rear wall of storage compartment.

Locating Electronics Model Numbers

Consumer electronics model number tags are generally located on the back or side of the units. Below are some of the common electronics items with possible locations of the model number tags.

Camera

- Model number tag is generally located under the film cartridge.

Camcorder

- Model number tag is generally located on the bottom, side or under the battery.

Locating Electronics Model Numbers (continued)

CD Player, DVD Player

- Model number tag is generally located on the back, front or bottom of the unit.

Cell Phone

- Model number tag is generally located on the inside of the battery compartment under the battery.

Computer (Desktop)

- Model number tag is generally located on the back, side or top of tower.

Computer (Laptop)

- Model number tag is generally located on the bottom of unit.

Projector, Projection TV, All TV's

- Model number tag is generally located on the back or side of TV

Stereo Receiver, Mini Stereo Unit

- Model number tag is generally located on the back of unit.

VCR

- Model number tag is generally located on the back or front of unit..

Locating Lawn & Garden Model Numbers

Lawn & Garden equipment manuals usually list the model number of the equipment and have diagrams including part numbers. If the manual is unavailable, locate the model number and serial number on the unit itself. Most power equipment model number tags are 2" x 3" in size. If your equipment is not listed below, model number tags are generally located in areas unlikely to need replacement even after years of use, such as on an engine. Below are the common model number tag locations for popular equipment.

Knowing the model number **and** serial number of the lawn and garden product makes it easier to look up part numbers. L&G model numbers and serial numbers contain internal codes for product type, series number, engine size, and deck or housing size.

Riding Mower

- Model number plate is generally located on the underside of the seat.

Locating Lawn & Garden Model Numbers (continued)

Walk-behind Mower

- Model number plate can be found either on the deck or on the rear door of the rear discharge unit.

Tiller

- Model number tags are usually found on the tine housing or on the rear center on the debris shield, behind the engine.

Snow Thrower (single stage)

- Model number plate is usually located next to the key and primer, on the lower handlebar, or on the right side or rear axle.

Snow Thrower (two stage)

- Model number plate is located on the bottom of the main gear housing, often called the belly pan.

Log Splitter, Chipper Shredders, Edgers

- Model number plate is usually found on the frame or main housing.

Generator

- Model number plate is usually on the case, fuel tank, or near the control panel.

Pumps

- Model number plate is usually found on the fuel tank or recoil starter of the engine.